

GRAM ICE MACHINES

Gram Commercial is a global supplier of ice machines for commercial users. The product range includes machines for cube ice, cubelet ice, crescent ice, flake ice and nugget ice. Please, contact us for further information.



- Hygienic design
- Removable door gasket
- Easy to clean air filter
- Stainless steel exterior
- Outstanding insulation
- Micro computer controlled
- Ice production capacity between 22-720 kg/24h

IM, Cube Ice Machines



IM21CNE

IM30CNE


IM45NE

IM65NE


Ice is the finishing touch to any cold drink and the quality of ice can leave a lasting impression with the customer. The IM machines are self contained. The machines produce exceptionally hard, crystal clear ice cubes at a temperature of -25°C. This ice melts very slowly, allowing customers to enjoy their cooled drinks for longer.

Even in high ambient temperatures, the IM machines provide an outstanding level of reliability which makes them suitable for a wide range of bars, pubs, cafes, restaurants, fast food chains and hotels.



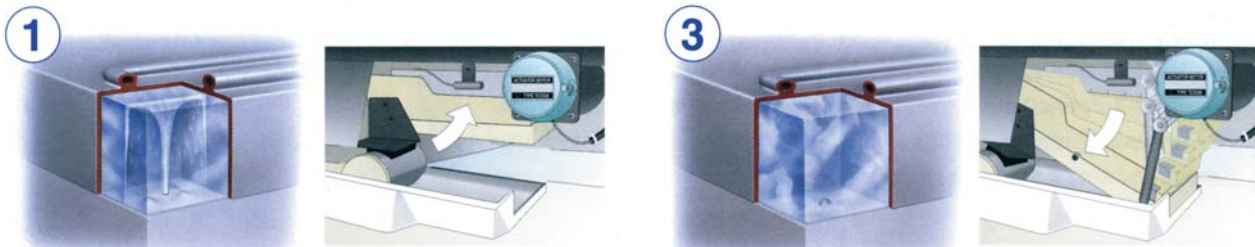


The unique spray system in Gram IM ice machines prevents unwanted ice formation outside of the mould during the manufacturing process, reducing the risk of bacterial growth. The unique range of IM ice machines are designed with hygiene as a priority and utilises a closed cell ice making system that has an automatic rinse and flush cycle. This means that, after every new batch of ice, the water reservoir will drain, rinse and then refill with fresh water.

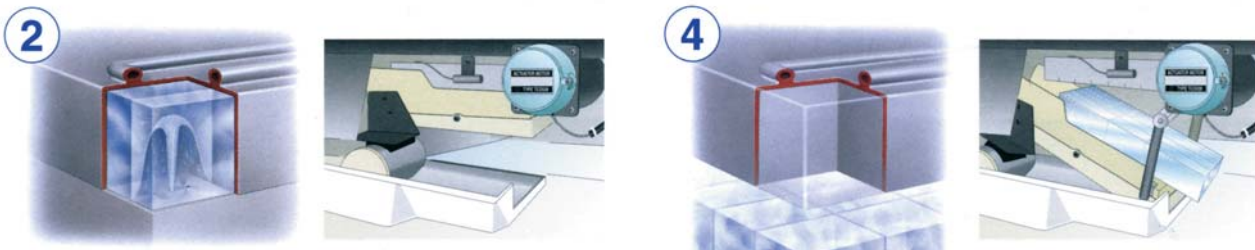

IM, Cube Ice Machines

It is possible to choose between ice machines with various sizes of ice cubes, depending on which type of drink needs to be cooled.

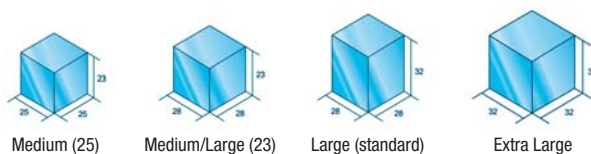

Extra Large (IM240DNE32): 32 × 32 × 32 mm
 Large (standard): 28 × 28 × 32 mm
 Medium/Large (23): 28 × 28 × 23 mm
 Medium (25): 25 × 25 × 23 mm

IM	Cube	Production capacity kg/24h	Storage bin capacity (kg)	Storage bin capacity (pcs.)	Width × Depth × Height (mm)	Electrical supply V/Hz	Electrical consumption (W/T) (kg)	Refrigerant	Weight (gros)
IM21CNE	L	22	11.5	500	398 × 446 × 695	230/50	240	R134a	38
IM30CNE ¹⁾	L	28	11.5	500	398 × 446 × 795	230/50	270	R134a	38
IM30CNE-25	M	24	11.5	675	398 × 446 × 795	230/50	270	R134a	38
IM45CNE	L	44	15	650	633 × 506 × 790	230/50	320	R134a	55
IM45CNE-25	M	39	15	880	633 × 506 × 790	230/50	320	R134a	55
IM45NE ¹⁾	L	44	18	780	503 × 456 × 940	230/50	330	R134a	51
IM45NE-25	M	39	18	1055	503 × 456 × 940	230/50	330	R134a	51
IM65NE ¹⁾	L	63	26	1130	633 × 506 × 940	230/50	400	R134a	60
IM65NE-25	M	56	26	1525	633 × 506 × 940	230/50	400	R134a	60
IM100NE ¹⁾	L	95	50	2170	704 × 506 × 1300	230/50	610	R134a	80
IM100NE-23	M/L	79	50	3845	704 × 506 × 1300	230/50	610	R134a	80
IM100CLE	L	95	38	1650	1000 × 600 × 790	230/50	630	R134a	77
IM100CLE-23	M/L	79	38	2920	1000 × 600 × 790	230/50	630	R134a	77
IM130NE ¹⁾	L	130	50	2170	704 × 506 × 1290	230/50	650	R404A	80
IM130NE-23	M/L	100	50	3845	704 × 506 × 1290	230/50	650	R404A	80
IM240NE ¹⁾	L	240	110	4780	704 × 665 × 1600	230/50	1320	R404A	122
IM240NE-23	M/L	225	110	8460	704 × 665 × 1600	230/50	1320	R404A	122
IM240ANE ¹⁾	L	240	- ²⁾	-	560 × 700 × 880	230/50	1320	R404A	91
IM240ANE-23	M/L	210	- ²⁾	-	560 × 700 × 880	230/50	1320	R404A	91
IM240DNE ¹⁾	L	240	- ²⁾	-	1084 × 700 × 500	230/50	1330	R404A	106
IM240DNE-23	M/L	225	- ²⁾	-	1084 × 700 × 500	230/50	1330	R404A	106
IM240DNE-32	XL	225	- ²⁾	-	1084 × 700 × 500	230/50	1330	R404A	106
IM240XNE ¹⁾	L	240	- ²⁾	-	1084 × 700 × 500	230/50	1330	R404A	106
IM240XNE-23	M/L	225	- ²⁾	-	1084 × 700 × 500	230/50	1330	R404A	106

1): These models are also available as water cooled ice machines

2): Requires separate ice bin